


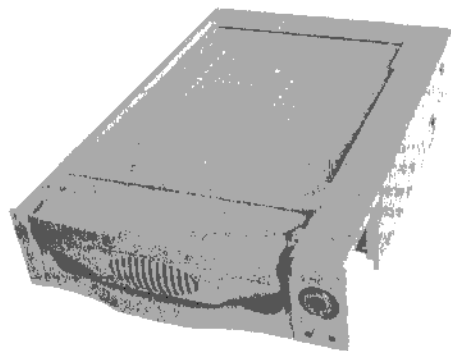

MOBILE RACK

USER MANUAL FOR REMOVABLE RACK

1-1 Introduction

Congratulations on your purchase of this Mobile Rack. The Mobile Rack is the perfect solution for data backup and transporting-data between computers.

The Mobile Rack is form-fitted for standard PC/AT 5.2" half-height bay. Its Inner Case can accept most half-height 3.5" and 2.5" drives (with separately purchased adapter cables). You can install any capacity drive without limiting.

Mobile Rack Features:

- Compatible with tower or desktop PC, external subsystem & RAID system cases.
- Support most 3.5" / 2.5" HDD.
- LED indicators for Power (Green) & HDD (Red).
- Easy installation & back up.
- Secure your data.
- Convenient data management & sharing.
- Auto-eject handle with patent design.
- Completely compatible with MS-DOS, Windows98/2000/XP
- Dimensions: 220*149*42MM

Note:

Before installing the Mobile Rack, verify the following items included in the color box. If any parts are damaged or missed, please contact your local dealer or sales representative immediately.

1. One Mobile Rack --including Receiving Frame & Inner Case.
2. One Plastic bag--including eight screws, 1*6 label & 2 keys
3. One User Manual.


2-1 Installation

2-1-1 Mobile Rack components:


The Mobile Rack consists of two components:

1. Receiving Frame.
2. Inner Case.

• Receiving Frame

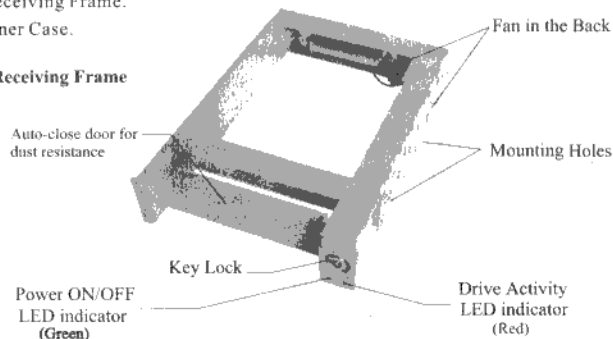


• Inner Case

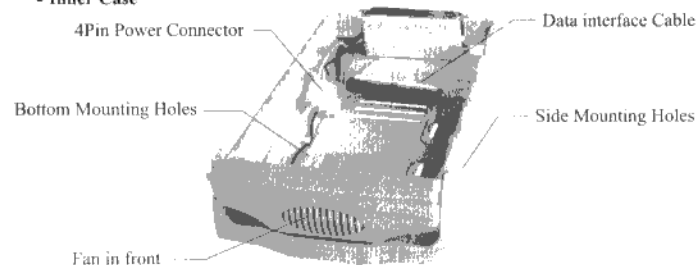


2-1-2 Installing the Receiving Frame.

1. Power OFF your computer and the other connected peripheral devices. Follow the precautions to discharge the static electricity.
 - Discharge any static electricity built up in your body by touching a grounded metal such as the computer case, if plugged in.
 - During installation procedures, avoid any contact with internal parts.
2. Unplug the power cord from the back of the computer.
3. Remove the computer's cover.
4. Remove the computer's front cover plate from the 5.25" drive bay before you install your Mobile Rack into.
5. Lift the handle and pull the Inner Case out from the Receiving Frame.
6. Slide the Receiving Frame into the 5.25" drive bay from the front to the back. Make sure the Receiving Frame mounting holes align with the drive bay's mounting holes. Secure with the supplied mounting screws (two on each side).

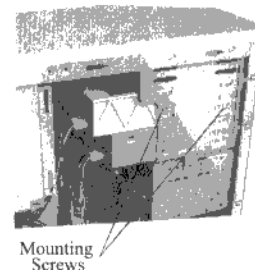

7. Connect the mobile rack with your system by the cable.
8. • Connect an available 4-pin power cable from the system's power supply with the 4-pin connector on the back of the Receiving Frame. The power connector is 'D' shape to ensure proper orientation when making the connection.
- Replace the computer's cover.

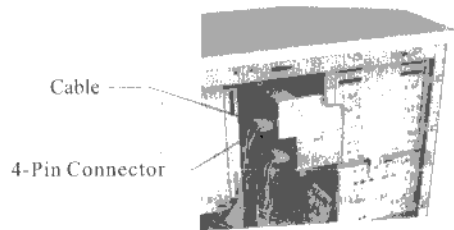


2-1-3 Mounting a Hard Drive in the Inner Case:

Proceed with the following steps to install a 3.5" Hard Drive into the Mobile Rack Inner Case.


1. Slide the Inner Case cover out from the Inner Case base,
2. In the Inner Case, you will find a plastic bag, a white 4-pin Terminal, and IDE cable.

If you install a new Hard Drive into a Mobile Rack, you must configure the drive before you install it.

3. Connect the 4-pin power connector and the data interface cables (80-pin for ATA/40-pin for IDE) with your Hard Drive.
4. Place the Hard Drive into the Inner Case carefully.

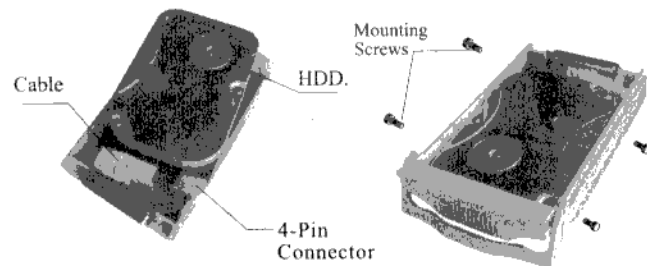

5. Slide the Inner Case cover onto the Inner Case base.
6. Push the Inner Case into the Receiving Frame.

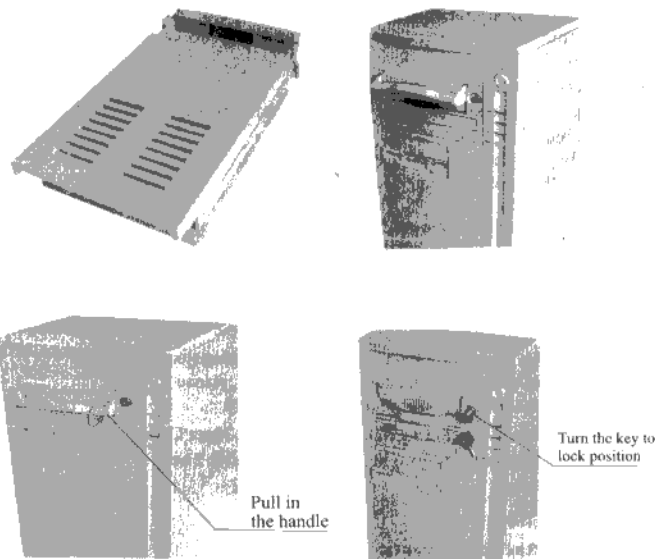

3-1 Using the Mobile Rack

Your computer must be Power OFF when the Hard Drive is inserted or removed. Once installed, the Receiving Frame can accept any other Hard Drive (as the same interface as the mobile rack).

3-1-1 To insert the Mobile Rack Inner Case:

1. Make sure the computer is OFF.
2. Insert the Mobile Rack Inner Case (with Hard Drive installed) into the installed Mobile Rack Receiving Frame and push evenly until the Hard Drive is seated.
3. Insert the key and turn the key to the left to lock.
4. Turn your computer ON, then the LED on the Mobile Rack will be on after a slight delay. The installed Mobile Rack is ready to use.

3-1-2 To remove the Mobile Rack Inner Case.

1. Turn your computer OFF.

2. Insert the key and turn key to the right to unlock.
3. Gently pull the Mobile Rack handle to slide the Inner Case out.



Key-Lock
Unlock Position



Key-Lock
Lock Position

Warning

- *DO NOT remove the Inner Case while the Hard Drive is busy, This may Cause damage to your HDD.
- *The key-lock must be in the lock position when used. Thus prevents unintentional removal while working.
- *Always turn the system power OFF when removing or inserting the Inner Case.